

TP223 - Forestry operations in the Auckland region


A guideline for erosion and sediment control

APPENDICES



TP223 - Forestry operations in the Auckland region

A guideline for erosion and sediment control

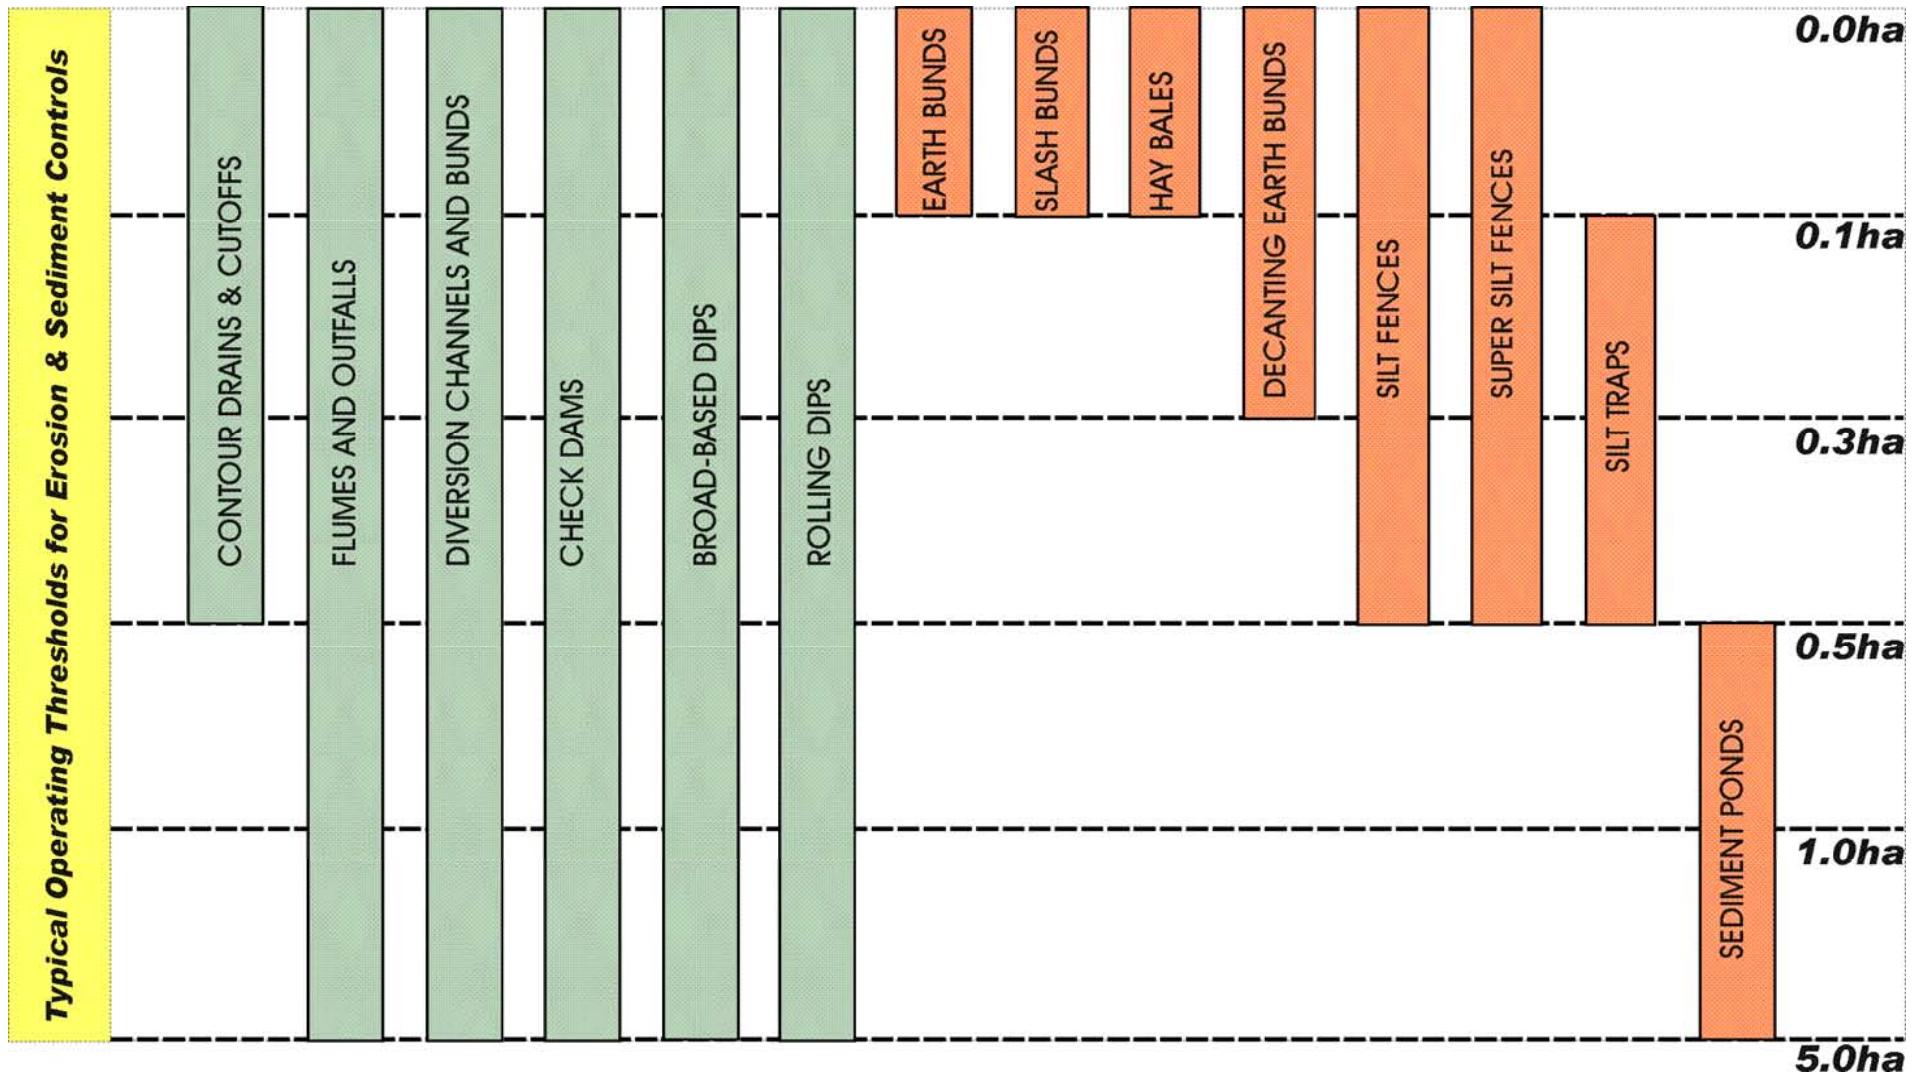


TP223 - Forestry operations in the Auckland region

A guideline for erosion and sediment control

Standard Symbols for Erosion and Sediment Controls



Check Dam



Contour Drain & Cutoff Drain



Corduroying



Debris Dam ("Super Silt Fence")



Decanting Earth Bund



Earth Bund



Flume/Outfall



Geotextiles

TP223 - Forestry operations in the Auckland region

A guideline for erosion and sediment control

(HS)

Grassing/Hydroseeding

→HB→

Hay Bale Barrier



Rock Lining

R—R—

Runoff Diversion Channel/Bund



Sediment Retention Pond



Silt Fence



Silt Traps



Slash Bund




Slash/Mulch

TP223 - Forestry operations in the Auckland region

A guideline for erosion and sediment control



Surface Roughening



Temporary Watercourse Crossing



Temporary Watercourse Diversion